

Display Audio with Smartphone Link

There will be some discrepancy in the contents of this user's manual due to the technical evolution and the software improvement. Please follow the actual function display. This manual is only for users' operating reference.

Contents

Safety Information 4

| | |
|-------------------|---|
| Precautions | 4 |
| For safety | 4 |

Before Using 6

| | |
|--------------------------------------|---|
| Precautions on using this unit | 6 |
|--------------------------------------|---|

Basic Operations 7

| | |
|------------------------------------------|----|
| Operation buttons | 7 |
| Power-On operation | 8 |
| Regional Setup | 8 |
| Adjust the volume | 9 |
| Gesture Control Operation | 10 |
| Display the Settings menu | 11 |
| Power off screen | 11 |
| Home screen descriptions | 12 |
| All source screen | 13 |
| Source control screen descriptions | 15 |
| List screen | 15 |

Connection 16

| | |
|------------------------|----|
| Wired Connection | 16 |
|------------------------|----|

Bluetooth Control 17

| | |
|------------------------------------------------|----|
| Information for using Bluetooth® devices | 17 |
| Register the Bluetooth device | 18 |
| Bluetooth setup | 18 |
| Playing Bluetooth Audio device | 21 |
| Hands-Free Function | 23 |
| Phone Setup | 27 |

MM-Link 28

| | |
|---------------------------------|----|
| Before start | 28 |
| Operation (iPhone) | 29 |
| Operation (Android phone) | 30 |

USB 34

| | |
|---------------------------------|----|
| Connect to the USB device | 34 |
| USB Operation | 34 |
| Searching Files Operation | 35 |

iPod / iPhone 37

| | |
|-------------------------------------|----|
| Setup for iPod / iPhone | 37 |
| iPod / iPhone Basic Operation | 37 |
| Searching Files Operation | 38 |

| | | | |
|------------------------------------------------------|-----------|-------------------------------------|-----------|
| Apple CarPlay | 39 | | |
| Setup for Apple CarPlay | 39 | | |
| Starting procedure | 39 | | |
| Setting the driver position | 40 | | |
| Android Auto | 41 | | |
| Setup for Android Auto | 41 | | |
| Starting procedure | 41 | | |
| Setting the driver position | 42 | | |
| Radio | 43 | | |
| Starting procedure | 43 | | |
| Basic operation | 43 | | |
| Auto preset procedure | 44 | | |
| Digital Radio (Only for DAB compatible model) | 45 | | |
| Starting procedure | 45 | | |
| Basic operation | 45 | | |
| Dashboard Camera | 46 | | |
| Starting procedure | 46 | | |
| Basic operation | 46 | | |
| File management | 47 | | |
| | | Playback | 48 |
| | | Other External Components | 50 |
| | | Using the back camera | 50 |
| | | Settings | 51 |
| | | Display the Settings menu | 51 |
| | | Display Adjust | 51 |
| | | System Settings | 51 |
| | | Audio Settings | 53 |
| | | Graphic Equalizer Settings | 53 |
| | | Fader/ Balance Settings | 53 |
| | | Sound Effect Settings | 54 |
| | | Zone Control Settings | 54 |
| | | Steering Control Switch | 55 |
| | | Appendix | 57 |
| | | Declaration | 61 |
| | | Important Notice on Software | 62 |
| | | EULA | 63 |
| | | Troubleshooting | 65 |


Safety Information

Precautions


IMPORTANT

Please read this user's manual carefully before operating this product to ensure proper use.


For safety concerns of using this product, the following symbols are used in this manual to indicate the important information that you need to be aware.


DANGER

The warning against anything which may cause death or serious injury if this is ignored. In order to reduce the risk of injury, please pay attention to the information.


CAUTION

The warning against anything that may cause accidents, personal injury or damage to the car.


NOTICE

Describe items that you should be aware of when using the product to ensure the safety.

For safety

 
- ▲ DANGER**
- Driver should not look at the display or operate the system while driving because driver could be distracted or caused accidents. Before looking at the display or operating the system, driver should stop the vehicle in a safe location and use the parking brake.
 - Do not pair Bluetooth device while driving. Stop your car at a safe place before attempting to pair.
 - Do not attempt to install or remove the unit by yourself. For safety concerns, please contact your dealer for advice on installation or removal of the unit.
 - If the unit has any abnormalities, like no power, no sound, strange noise, or odor, turn off the device immediately and consult your dealer or nearest service center.
 - Do not put foreign objects into the product. If there are foreign objects in the product, please consult your dealer or the nearest service center.
 - Keep the volume in an appropriate level to be aware of road and traffic conditions while driving. This unit is designed for using exclusively in automobiles.

⚠ CAUTION

- Operating the audio system for a long period while the vehicle engine is turned off will drain the battery.
- Do not disassemble, modify or repair the product by yourself. Be sure to consult your dealer or the nearest service center.
- Do not have liquids to get into the product. The liquids will result in electric shocks and damage the product.

📻 About FM radio reception

- When listening to FM broadcasts in a moving vehicle, the reception conditions constantly changes with building, terrain, distance from the transmitter and noise from other vehicles.
- The following phenomena of FM reception are normal and do not indicate a problem with the radio itself.

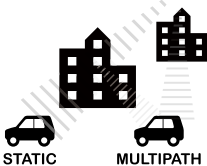


👉 NOTICE

- Fading and drifting: The range of FM is about 40 km (25 miles), except for the high-power stations. If the vehicle moves away from the transmitter, the signal tends to fade out and/or drift. This is common to FM broadcasting and might be accompanied by distortion. Fading and drifting can be minimized by tuning to a stronger signal.
- Static and flutter: When the lines of sight link between the transmitter and vehicle is blocked by large building etc. , the broadcast sound may include static or flutter. You may also experience fluttering while driving along a tree-lined road. The effects of static and fluttering on the sound can be reduced by decreasing treble.
- Multipath: Due to the reflection characteristics of FM signals, direct and reflected signals may reach the antenna simultaneously (this is called multipath) and cancel each other. As the vehicle moves through such a spot, a momentary flutter or loss of reception may occur.
- Station swapping: When two FM stations are located close to each other in the frequency spectrum and the current signal is interrupted by an electronic dead spot caused by static or multipath, the stronger signal may automatically be selected until the original signal returns. Station swapping can also occur as the vehicle moves away from a station and towards another with a stronger signal.
- Buttons and Icons in this device will be described in bold lettering, e.g. **Radio function**, or **System Screen**.

Before Using

Precautions on using this unit

 - This precision mechanical device should be handled carefully.
- Please avoid using this device at extremely high or low temperatures, which can cause malfunction or failure. Metal objects and liquids should not be in contact with the device, and hard shocks can damage the device.

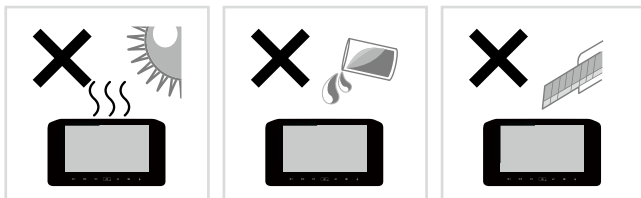

Clean the unit

- Do not use volatile liquid such as alcohol or thinner for cleaning the unit, which may scratch the case or remove the screened print.
- If you use a chemical wiping cloth, follow the instructions carefully.

Clean the display

 
- To clean the display, wipe it with a dry soft cloth, such as silicon cloth.
- Rubbing the display with a rough cloth could scratch the surface.

Protecting the monitor

- To protect the monitor from damage, do not operate the monitor using a ball point pen or similar tool with a sharp tip.
- If you stick a film screen protector on the screen, it may interfere with touch panel operation.

Basic Operations

Operation buttons

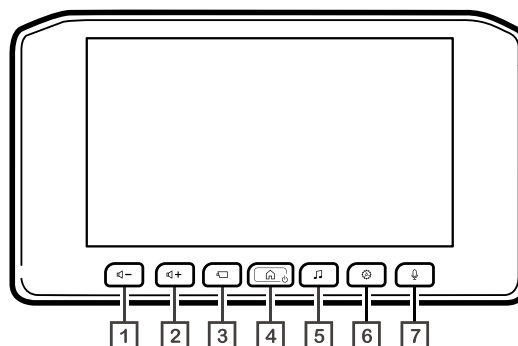

| Number | Hard Key | Name | Function |
|--------|----------|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 | | Volume down | <ul style="list-style-type: none"> Adjust the volume down. |
| 2 | | Volume up | <ul style="list-style-type: none"> Adjust the volume up. The volume goes up to 25 when you keep pressing. |
| 3 | | Camera | <ul style="list-style-type: none"> Short press to enter the camera screen or to return from the camera screen. |
| 4 | | Home | <ul style="list-style-type: none"> Short press to display Home screen. Long press to enter the power off screen and short press to return from the power off screen. |
| 5 | | Audio | <ul style="list-style-type: none"> Short press to enter All Source or AV screen. Long press to enter audio setting menu. |
| 6 | | Settings | <ul style="list-style-type: none"> Short press to enter the Setting mode or to return from the Setting mode. Long press to display sub menu on mirroring screen. *Please connect with MM-Link. |
| 7 | | Voice | <ul style="list-style-type: none"> Short press to trigger Apple CarPlay Siri or Android Auto voice recognition. |

Power-On operation

When turning on the car, the unit will be automatically turned on.

 
- 1 Push Start Button and turn on your car.



- 2 The opening screen on the unit will appear as below picture.




- 3 Read the precaution messages and touch [Agree] or touch [Language] to change the display language.

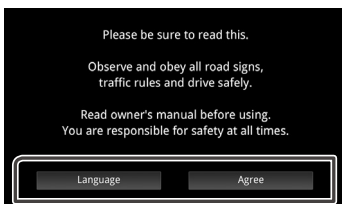

Regional Setup

 - 1 Press  to display the setting menu.

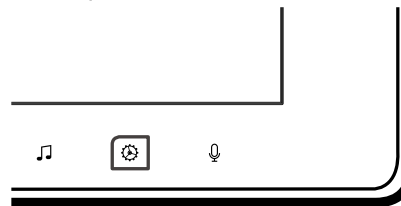

- 2 Touch [System] to display the System menu.



- 3 Touch [Regional] to display the Regional menu.



4 Set each item



■ Language

Select Language.

■ Clock Sync

Clock Sync has GPS Sync and Manual settings.

■ Time Zone

If you select [GPS-Sync] for Clock Sync, select the time zone.

■ Clock Adjust

If you select [Manual] for Clock Sync, adjust the date and time manually.

■ Time Format

Select the time display format. (**12-Hour** or **24-Hour**)

■ Adjust date and time

Select [Manual] for Clock Sync on the Regional menu.

1 Select [Clock Adjust] on the Regional menu.

 
2 Adjust date and time by touching arrow buttons.



Adjust the volume


Adjust the volume up or down by pressing **🔊+** and **🔊-**. Press **🔊+** to increase the volume, and press **🔊-** to decrease the volume (0-40).

Holding **🔊+** to increase the volume continuously to level 25. Volume level 26-40 can be adjusted by pressing one step by time.

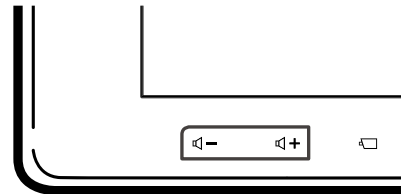


Gesture Control Operation

 
- Touch the appropriate function key on the touch screen.

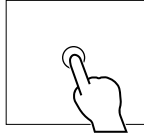

 
- Touch and hold the appropriate function key on the touch screen.

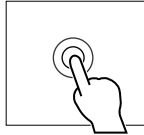

 
- Flick and swipe in the direction of the arrow on the touch screen.

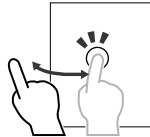

 
- Touch and drag in the direction of the arrow on the touch screen.

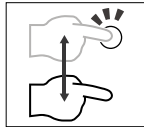

 - Touch with two fingers in the direction of the arrow on the touch screen to move to the previous or next content in Radio and audio sources.

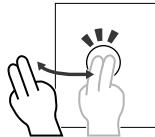

 - Touch with two fingers in the direction of the arrow on the touch screen to adjust volume up and down.

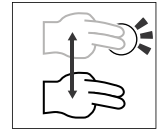


- Touch with four fingers in the direction of the arrow on the touch screen to mute or turn off the mute.



Display the Settings menu

1 Press  button to display Settings menu.

 2 The contents of the menu are as below.

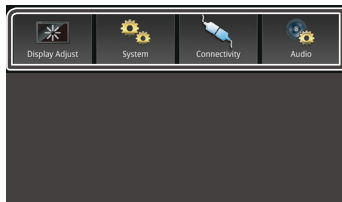

• Display the Display Adjust Settings.



• Display the System Settings.



• Display the Connectivity Settings.



• Display the Audio Settings.

 
NOTE

• On **P. 51**, "Display the Settings menu".


Power off screen

When power off screen, the screen will become black.

1 Long press  button.



2 Back to the original screen.

Short press  button and display the original screen.

Home screen descriptions

Most functions can be performed from the Home screen.

- 1 Press  button.



- 1 Display time and date.
- 2 Display current source information.
Touch to display the control screen of the current source.
- 3 Short-cut source icons.

All source screen

You can display icons of all playback sources.

1 Press  button.

2 Touch .



1 Display available sources.

2 Return to the Home screen.

From the screen, you can select the following sources and functions.



- Play files on USB devices.



- Play an iPod/iPhone.



- Display the Hands Free screen.



- Play a Bluetooth Audio player.



- Turn off the AV source.



- Play the Digital Radio (DAB).*



- Start up Dashboard Camera function if equipped with the dashboard camera device.



- Switch to the Apple CarPlay from the connected iPhone.



- Switch to the Android Auto from the connected Android device.



 
- Switch to the MM-Link from the connected iPhone / Android device.



- Play the Radio.

*Only for DAB compatible model.

☞ To select the short-cut source icons on the Home screen.

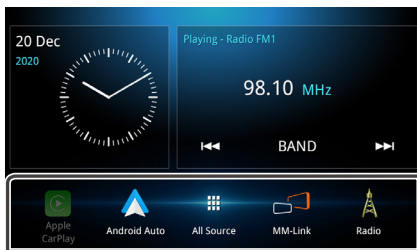

- The 4 icons other than the [All source] icon are located on the Home screen.
- Except for [Apple CarPlay] and [Android Auto] icons, you can change the icons displayed on this area by customizing the All Source selection screen.



☞ To turn off the AV source

- 1** Press  button.
- 2** Touch .
- 3** Touch [AV Off].



☞ Customize the short-cut source icons on the Home screen.

 
You can arrange the short-cut source icons on the Home screen.

- 1** Press  button.
- 2** Touch .
- 3** Touch and hold the icon which you prefer and move to the customizing area.



Source control screen descriptions

There are some functions which can be performed from most screens.

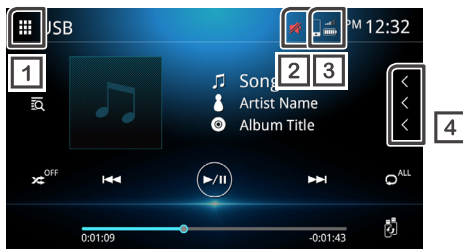

1 **All source**

Display the All Source screen.

2 **Mute**

Mute icon is indicated while this unit is muting.

3 **Connected Bluetooth phone status**

Phone signal and battery status.

4 **Text scroll**

Scrolls the displayed text.

List screen

There are some common function buttons in the list screens of most sources.



1 **Return**

Return to the previous screen.

2 **etc.**

Buttons with different functions are described as below.

- Move to the upper hierarchy.
- Move to the top.
- Play all tracks in a folder containing the current track.
- Alphabet search

3 **Music / Video file switching**

4 **Display the list of selection type**

5 **Text scroll**

Scrolls the displayed text.

 
 
NOTE

- Depending on the current source or mode, some functional buttons may not appear.


Connection

Wired Connection

This unit can be connected to external devices. Open the USB front cover and connect the external device via the following accessory.

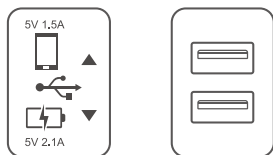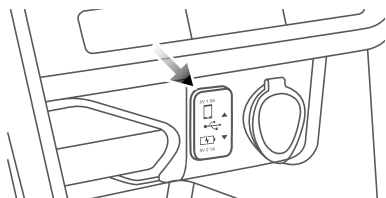


 - Depending on the model of car.
In some car models, a connector is available in the glove box.

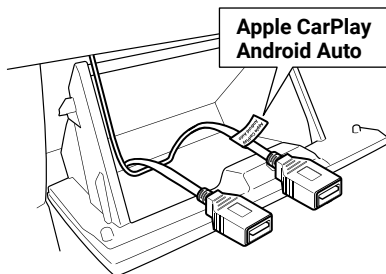


Connecting a USB device (see P. 34)

 Both connectors can be used for USB device.

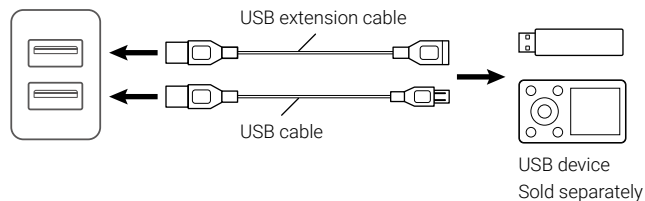


Connecting an iPod/iPhone (see P. 37)

 For iPod/iPhone usage, connect the USB cable to the top connector. The bottom connector is used for charging.

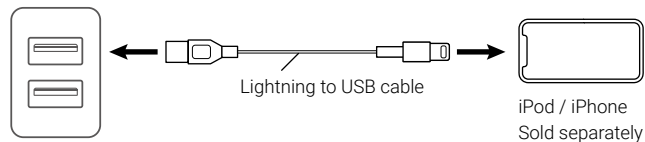

Connecting an Android smartphone (see P. 41)

 For Android smartphone usage, connect the USB cable to the top connector. The bottom connector is used for charging.

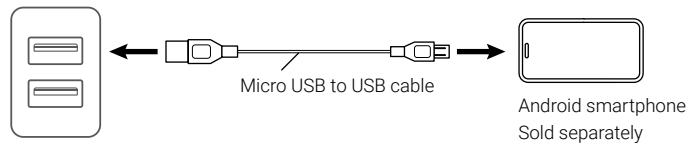

Bluetooth Control

Information for using Bluetooth® devices

Bluetooth is a short-range wireless radio communication technology for mobile devices such as mobile phones, portable PCs, and other devices.

Bluetooth devices can be connected without cables and communication with each other.



⚠ CAUTION

- While driving, do not perform complicated operations such as dialing numbers, using the phone book, etc. When you perform these operations, stop your car in a safe place.

NOTE

- The connection condition may vary depending on different environment.
- Some Bluetooth audio may be limited by the format of mobile device's application.
- This unit may not work for some Bluetooth devices.
- Some Bluetooth devices are disconnected when this unit is turned off.

Supported Bluetooth profiles

This unit conforms to the following Bluetooth specifications.

Version

- Bluetooth Ver. 5.0

Profiles (Mobile phone)

- HFP (V1.6) (Hands Free Profile)
- PBAP (V1.1) (Phonebook Access Profile)

Profiles (Audio player)

- A2DP (V1.2) (Advanced Audio Distribution Profile)
- AVRCP (V1.5) (Audio/Video Remote Control Profile)

Profiles(MM-Link)

- A2DP (V1.2) (Advanced Audio Distribution Profile)
- AVRCP (V1.5) (Audio/Video Remote Control Profile)
- HID(V1.0)(Human Interface Device)

Register the Bluetooth device

Before using the Bluetooth function, please register the Bluetooth audio player or mobile phone in the unit.

You can register up to 10 Bluetooth devices.

NOTE


- Up to 10 Bluetooth devices can be registered. When the 11th Bluetooth device had been registered, the Bluetooth device connected on the earliest date will be removed automatically.
- The devices that can be used simultaneously are
-2 Hands-free devices.
-5 Bluetooth Audio devices / 4 Bluetooth Audio devices and 1 MM-Link device.

1 Search for the name of unit (MITSUBISHI MOTORS DA001) from your mobile device.


2 Confirm the request on both unit and mobile device.

Please check the list items and connect your Bluetooth device.

 Passkey 012345
Device Name



 3 Select the functions you would like to use.

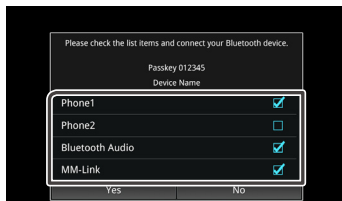

■ Phone1 / Phone2

2 hands-free devices can be connected simultaneously.

■ Bluetooth Audio

Put check mark to use Bluetooth Audio.

■ MM-Link

Put check mark to use MM-Link.

4 Touch [Yes].

- When the connection is completed and successfully connected, Bluetooth telephone connection icon appears on the top of the screen.

NOTE

- If the mobile phone supports PBAP, the phonebook data is downloaded automatically when you select **Phone1** or **Phone2**.

 
Bluetooth setup

1 Press  button.

2 Touch [Connectivity].



3 Touch [Bluetooth].

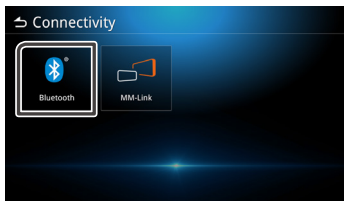

4 Set each item as follows.

Bluetooth

Set whether to use the Bluetooth function.
The default is ON.

Device Select

Connect the Bluetooth device.

Device Name

 
Change the device name.

Connect the Bluetooth device

1 Touch [Device Select].




2 Touch one of the devices you would like to connect.

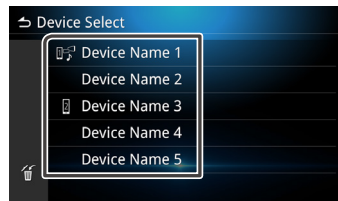

NOTE

- If the icon is lighted, it means that the unit will use that device.

 3 Set each item as follows.

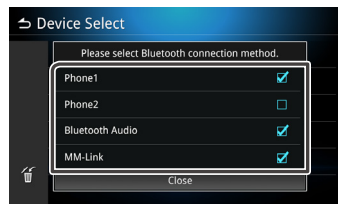

Phone1 / Phone2

2 hands-free devices can be connected simultaneously.

Bluetooth Audio

Put check mark to use Bluetooth Audio.

MM-Link

Put check mark to use MM-Link.

 
4 Touch [Close].

❏ To delete the registered Bluetooth device

1 Touch .




2 Touch the device name to delete.

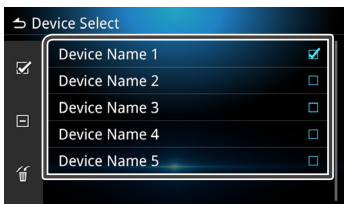

❏  Selects all Bluetooth devices.

❏  Clear all selected check marks.

 3 Touch  and the confirmation message appears.

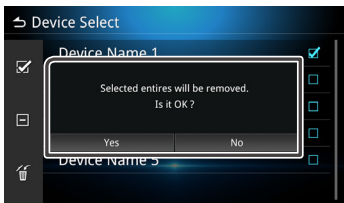

4 Touch [Yes].

❏ Change the device name

1 Touch Device Name.



2 Touch  to delete letters.

3 Type in device name.



4 Touch [Enter].

 
Playing Bluetooth Audio device

Touch Bluetooth Audio icon on the source selection screen.

NOTE

- While the Bluetooth Audio is playing, if you connect your Android phone / iPhone to the USB port and enable Android Auto / CarPlay, the Bluetooth Audio will be disconnected.
- In this case, you will not be able to select the Bluetooth Audio icon from the All Sources screen, i.e., you will not be able to switch to Bluetooth Audio.
- In order to play the Bluetooth Audio, you need to disconnect your Android phone / iPhone from the USB port.

Bluetooth basic operation

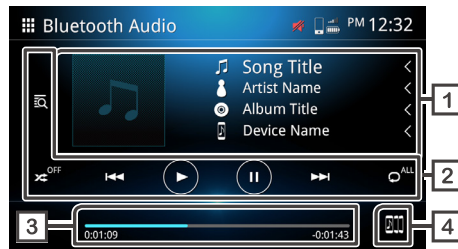

1 Track information display

Display the current track information, such as song title, artist name, album title, and connected device name.

2 Operation keys

- Search for files.
- Shuffle play.
- Shuffle play off.
*Shuffle may not show depending on mobile device.
- Move to the previous / next content.
Long press to fast forward or fast backward. *
This operation is also possible with the steering control.
*If the mobile device doesn't support this function, it can't be performed on the unit.
- Play.
- Pause.
- Repeat all files.
- Repeat a file.
- Turn off repeating.
*Repeat may not show depending on mobile device.

3 Playing time

Display the current playing position.


4 Bluetooth audio devices switch.

Bluetooth audio device change

Up to five Bluetooth audio device can be connected and switched.

1 Touch  and list of registered devices is displayed.

2 Touch the device name you would like to connect.

- Touch  on the left of the connected device.

 The device is connected.

 The device is disconnected.


 6th and later devices.

* Up to five devices can be used simultaneously.




3 Touch .


- The device can start to play when the color changes from white to blue.

 The device is during playback.

 The device is connected.

 The device is disconnected.



4 Touch  to go back to Bluetooth Audio operation.

NOTE

- When the Bluetooth audio is switched to another one, the current audio settings will be deleted and the new connection settings will be restored.

Searching Files

1 Touch .

2 Touch the selected file or folder.



3 Touch the selected item in the content list and start to play.

Hands-Free Function

Use telephone function by connecting the Bluetooth telephone to the unit.

 
Make a phone call

- 1 Press  button.
- 2 Touch .
- 3 Touch [Phone].

NOTE

- If the mobile phone supports PBAP, the unit can display the phone book list and call history after mobile phone is connected with the unit.
 - Phone book list up to 1000 entries.
 - Call history up to 50 entries.

4 Select operation function.

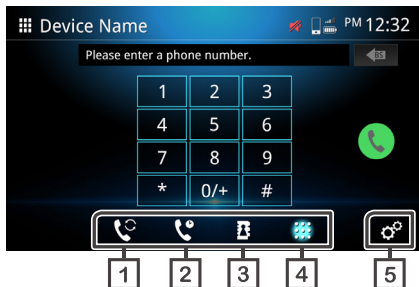

1 Switch to another mobile phone.

You can switch between the mobile phones when you connect two mobile phones.

2 History

Call from the dialed call, received call or missed call.

3 Phonebook

Call from the phone book downloaded from the phone.

4 Dial

Call by entering a number.

5 Phone Setup

Phone Setup screen appears. (P. 27)

NOTE

- The sound quality and performance of Bluetooth hands-free will be effected by mobile phones and carrier conditions.
- Status of battery and signal reception may differ from those displayed on the mobile phone.

Call history usage

Call from the dialed call, received call or missed call.

1 Touch .

 
2 Select phone number from the list.



Phonebook usage

You can use phonebook to make a call. Before starting to use, please make sure to download the phonebook data.

1 Touch insert the phonebook screen.

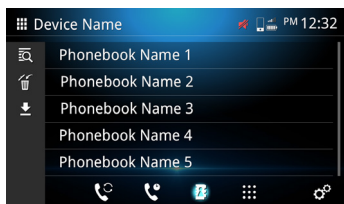


Searching by alphabet.

Remove phonebook.

Download phonebook to the unit.

 2 Touch and start downloading.

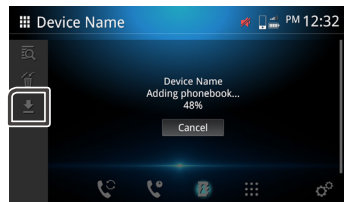

NOTE

- Up to 1000 phonebook entries can be downloaded. If the phonebook contains more than 1000 entries, remaining entries will not be transferred.
- Up to 10 Bluetooth devices can be stored in the unit.
- When you connect the mobile phone of which the phonebook data had been previously downloaded, the previously downloaded data will be displayed.

3 After download the phonebook data, you can start to use phonebook and make a call.

 
Call using the phonebook

1 Touch .


2 Touch .

3 Select the initial.

- Special characters cannot be used for searching.
- Different languages with the first character equivalent accent can be used for searching, but cannot be used to search middle word.

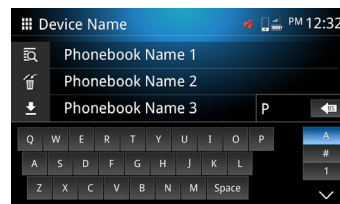

4 Select the name from the list.

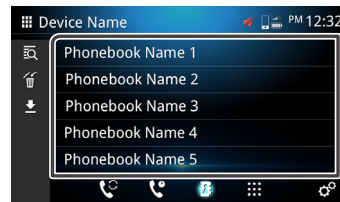 

5 Select the phone number from the list.

 


Move to the upper hierarchy.

Entering phone numbers to make a call

1 Touch .

2 Enter the phone number with dial pad.*

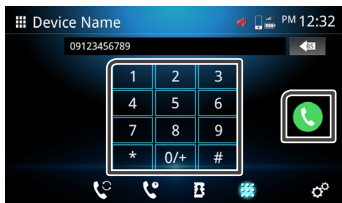


*The text box can only enter maximum 30 numbers. If over 30, the dial pad will be disabled.

3 Touch .

Receive Incoming call

 
1 Touch to answer the phone call or touch to reject the incoming call.

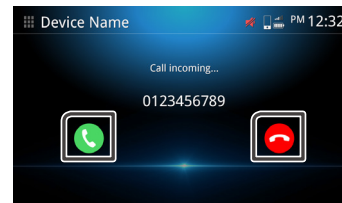

To end the call

While talking, touch to end the call.

 
Operations during the call

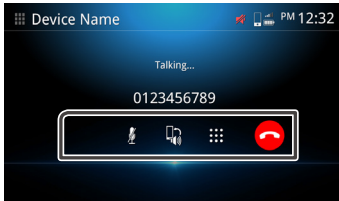



Adjust the reception volume up and down.

This operation is also possible with the steering control. Press **+** and **-** hard keys or use two fingers swipe on the screen. Swipe up is volume up and swipe down is volume down.


Mute

 
Touch  to mute or unmute the voice.

Voice switch




Touch  /  to switch the voice from the speaker to mobile phone or from mobile phone to the speaker.

Output the dial tone

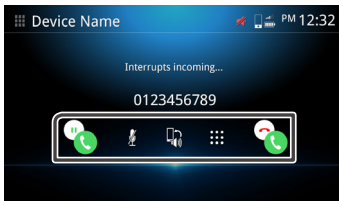Touch  to display dial pad.



 
Call-waiting

When you are talking and receive a new call, you can answer the newly received call by touching . The current call is put on hold. Each time you touch , the caller will change to the other one. Touch  is to hang up the interrupts incoming call and keep current call.

Phonebook deletion

1 Touch .

2 Select the name or use below icon.

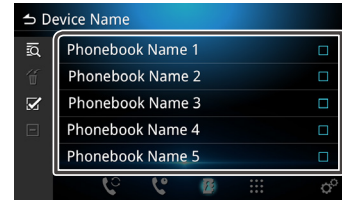

Select all.

Clear all checks.

3 Touch  and appear the confirmation message.

4 Touch [Yes].

Phone Setup

1 Press  button.

2 Touch .

3 Touch [Phone].

4 Touch .



5 Setup each function as follows.



Select Phone Device.

Select the mobile phone to use as the Hands-Free phone 1 or 2 from the registered device list.

Touch  or  to switch between the selected phone device.



Auto Response

Set the automatic response time to pick-up the incoming call.

OFF (Default) : Turn off the automatic response.

1 / 5 / 10 / 15 / 20 / 25 / 30 seconds : Set the ringing duration.

Sort order

Set the way of sorting the data of phonebook.

First Name / Last Name : Sort data by the first name.

Last Name / First Name : (Default): Sort data by the last name.

Reception Volume

Adjust the reception volume (0-40).

Default value is "23".

Incoming Ring Tone Volume

Adjust the ring tone volume while talking (0-40).

Default value is "23".

MM-Link

You can use MM-Link to display the smartphone's screen on the unit.

Before start

 
1 Download 'MM-Link for Display Audio' from App Store (for iPhone) or Google Play (for Android phone).

- 'MM-Link for Display Audio' is a free Application.
Compatible devices are the following
 - iOS version 13 or later
 - Android version 6.0 or later
 - Bluetooth support

2 Pair your smartphone with the unit via Bluetooth.

- See Register the **Bluetooth device (P. 18)**
and **Bluetooth setup (P. 18)**

3 On the Bluetooth connection method screen, check the MM-Link checkbox.

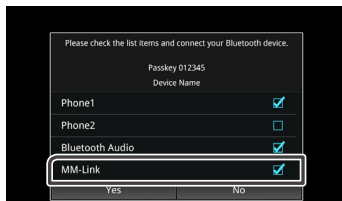

NOTE

 
- 2-way touch control may not work with some Android Smartphone due to Smartphone's OS version or technical spec.
- Some Smartphone Video Apps or Video contents cannot be displayed to Display Audio screen due to App specification or copy-right policy.
- If you recognize that your smartphone gets hot, please stop using MM-Link and disconnect USB.
- Without Bluetooth connection, some functions, such as operation, cannot be realized.

Operation (iPhone)

1 Press  button.

2 Touch .

3 Touch [MM-Link].

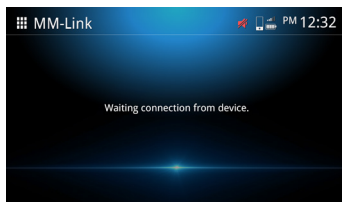

4 Activate 'MM-Link for Display Audio' in your smartphone.

5 On your iPhone, launch "Setting". Touch "Control Center". Add "Screen Recording" to "INCLUDE" list. Launch Control Center of your iPhone, touch and hold Screen Recording icon and then touch "MM-Link" and start broadcast.





6 Connect your iPhone with the unit via Lightning to USB cable.

7 Read the caution carefully and touch [Agree].



8 MM-Link screen appears.

9 To enable touch operation, calibration is carried out. (P. 32)

 
- Touch , display the Next Virtual Key.
 - Touch , display the Home screen.
 - Touch , display the Previous Virtual Key.
 - Touch , check that the calibration is successful.
- * If the calibration fails, please start again from No.5.

Operation (Android phone)

1 Press  button.

2 Touch .

3 Touch [MM-Link].

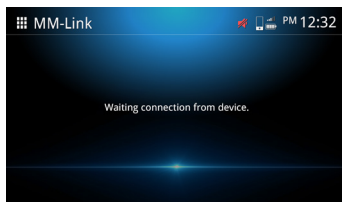

4 Activate 'MM-Link for Display Audio' in your smartphone. Connect your Android smartphone via USB cable. You will see the Recording Permission Toast on your Android smartphone. Press "Start now" to start capturing your Android screen.

5 Read the caution carefully and touch [Agree].



6 MM-Link screen appears.

NOTE

- You can check "how to" tutorial in 'MM-Link for Display Audio'.
- When you use MM-Link first time, MM-Link terms of service are displayed. It is necessary to agree to the MM-Link terms of service to use this function.

NOTE

- While displaying the MM-Link, you can switch to another audio source from "AV Source Select" on the MM-Link setup screen.
- While you use the MM-Link function with an iPhone, MM-Link is discontinued by the following operations. To resume the MM-Link functions, disconnect the USB cable and try connecting it again.
 - Receiving a call
 - iPhone's screen recording function is stopped.
 - iPhone screen is turned off.
- Due to a restriction in the smartphone, there may be no audio for some apps.
- While you use the MM-Link function with an Android device, the software keyboard is displayed only when you operate the Android device and enable the virtual keyboard beforehand.
- You cannot use both MM-Link and iPod source at the same time.
- You cannot use both MM-Link and Bluetooth Audio source at the same time.
- After you finish using the MM-Link function, stop broadcast on iPhone's screen recording function. Otherwise iPod, Apple CarPlay and Bluetooth Audio sources may not work correctly.
- For iPhone users, due to iOS system limitations, only one application can be opened at a time. When using any navigation application, please refrain from using other applications as this will interfere with MM-Link operations.

For example, if you use Waze together with Spotify, Display Audio will stop displaying Waze Navigation screen and only Spotify sound comes from Display Audio.
- Please do not rotate your iPhone during calibration (**P 32**).
- If you manually put your iPhone to sleep, the connection will be lost. It recommend that you set your iPhone's auto-lock to "Never".
(Settings->Display & Brightness->Auto Lock)
- Android phone has different levels of driving operation restrictions depending on the application.

MM-Link Setup

 
1 Press  button.

2 Touch [Connectivity].



3 Touch [MM-Link].


4 Settings for each item as follows.

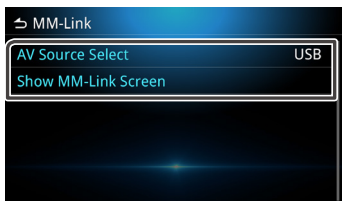

AV Source Select

When using MM-Link, you can choose the media source to be played in the background.

 AV OFF/MM-Link/Radio/DAB/USB

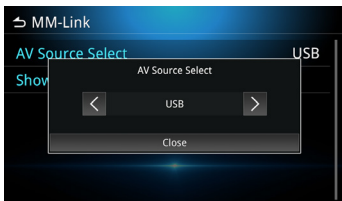


Show MM-Link Screen

 
 
When you press the item, the screen displays MM-Link.

Virtual hard key set up




While MM-Link is connected successfully, you can operate the App by using the virtual keys.

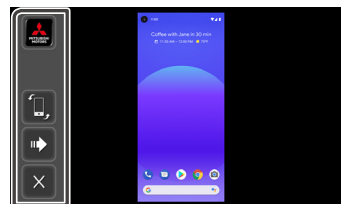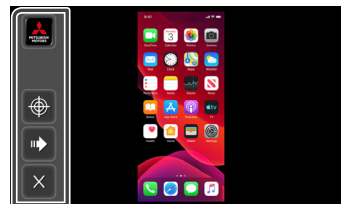

• Long press  button.

 
 
The virtual hard key appears.







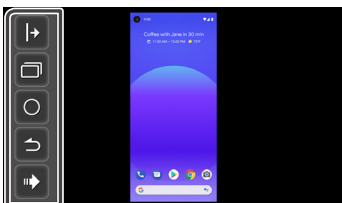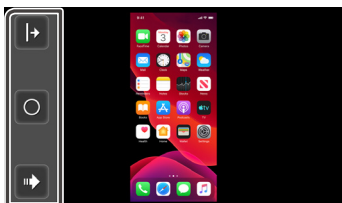

* Virtual hard keys

-  My Mitsubishi App *
* Only Indonesia has this app.
-  Touch position calibration.
* Only support iOS smartphone.
** During calibration, the display should be in portrait orientation and should not be rotated.
*** Please set the Tracking Sensitivity in the iPhone Touch Settings to as low as possible.
-  Screen rotation *
* iPhone doesn't support screen rotation.

-  Go to the next virtual hard key.
-  Close the virtual key.



* Virtual hard keys

-  /  Display the virtual key at the right/left side of screen.
-  Display the screen in pagination way.
* iPhone doesn't support.
** Depending on the smartphone, image may look expanded.
-  Back to home.
-  Go to the previous screen.
* iPhone doesn't support.
-  Go to the previous virtual hard key.

NOTE

- Each function of the MM-Link virtual hard key differs depending on the connected device and may differ from the function operated on the device.
- The screen examples shown in the manual are those for the Global model.
- Screen may vary according to the models.

USB

 
Connect to the USB device

- 1 Connect the USB device to the USB port (P. 16).
- 2 Press  button.
- 3 Touch .
- 4 Touch [USB].
 - Supported USB profile FAT16, FAT32.

 
USB Operation

- 1 Press  button.
- 2 Touch .
- 3 Touch [USB].

Music File

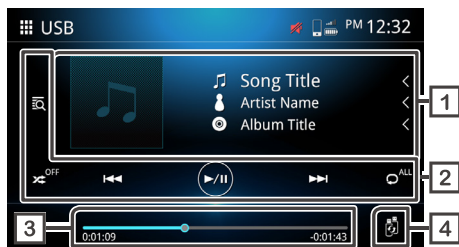



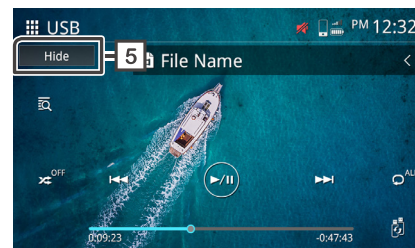





Video File



1 Track information display

Display the current track information, such as music name, artist name, album name, file name and folder name.*
 * Only a file name and a folder name are displayed if there is no tag information.

2 Operation keys

-  Search for tracks / files.
-  Shuffle play.
-  Shuffle play off
-  Move to the previous/ next content.
 Long press to fast forward or fast backward.
 This operation is also possible with the steering control.
-  Play or pause.
-  Repeat all files.
-  Repeat a file.
-  Repeat the files in the folder.

3 Playing time


Display the current playing position. You can drag the circle point left or right.

**4 USB devices switch**

 When plug in 2 USB devices, you can touch this key to switch from USB 1 to USB 2.

5 Hide (Video file only)

Hide all information on the screen.

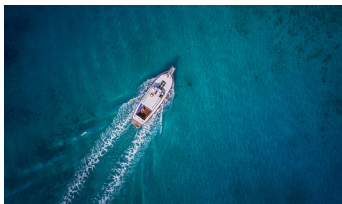**NOTE**

- Touch to display the control screen.

Searching Files Operation

You can search music or video files by the following operations.

1 Touch .

2 Touch to selected a list type.



3 Touch the selected item in the content list.

 
NOTE




- For operation of the list screen, please see **List screen (P. 15)**.

Folder search

You can search for a file according to hierarchy.

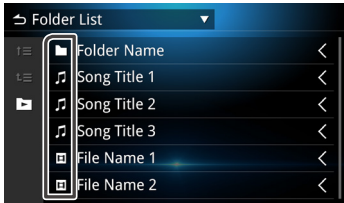- 1 Touch Folder List.
- 2 Touch the folder you would like to select.



-  File folder.
-  Music file.
-  Video file.

 
NOTE

- Next file will be played automatically, regardless of music or video files in the folder list.
- Hierarchy of sorting result is folder > files.

Category search

You can search for files by selecting category.

- 1 Touch Category List.
- 2 Select which category you would like to search.

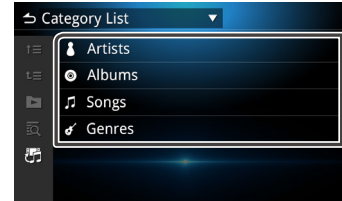

-  Music / Video file switching.

- 3 Touch to select the desired item in the list.
Repeat this step until you find the desired file.

 
NOTE

- The list corresponding to your selection appears.


iPod / iPhone

Setup for iPod / iPhone

iPod / iPhone with a Lightning connector can connect to the USB port.

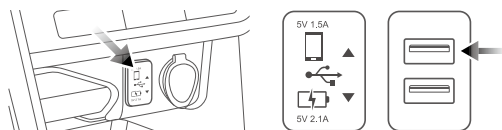

Apple CarPlay
Android Auto

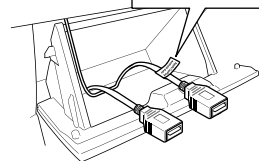 


Connect iPod/iPhone.

- 1 Connect the iPod/iPhone to the USB port.
- 2 Press  button.
- 3 Touch .
- 4 Touch [iPod] .

▲ DANGER

 - Firmly secure the iPod when driving. Do not let the iPod fall onto the floor, where it may become jammed under the brake or accelerator pedal.



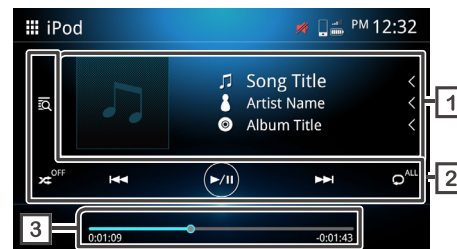






iPod / iPhone Basic Operation



1 Track information display

Display the current track information, such as music name, artist name, album name, file name and folder name.

2 Operation keys

-  Search for tracks/files.
-  Shuffle play.
-  Shuffle play off
-   Move to the previous / next content.
Long press to fast forward or fast backward.*
This operation is also possible with the steering control.
*If the mobile device doesn't support this function, it can't be performed on the unit.
-  Play or pause.
-  Repeat all files.
-  Repeat a file.
-  Turn off repeating.

3 Playing time

Display the current playing position. You can drag the circle point left or right.



: Play



 
: Pause

Searching Files Operation

You can search music or video files by the following operations.

1 Touch  .

2 Touch the desired category.

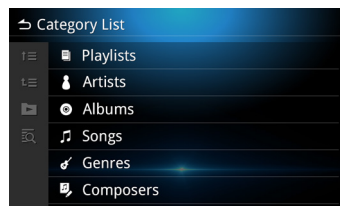

Apple CarPlay

Setup for Apple CarPlay

Apple CarPlay can only be operated on compatible iPhone which is connected to the unit via certified USB cable.

Apple CarPlay may not be available on some countries or regions.

For details about Apple CarPlay, visit the official website:

<https://www.apple.com/ios/feature-availability/#apple-carplay>

Apple CarPlay compatibility

Apple CarPlay is available at least on following iPhone models with iOS 13 or later.

 
- iPhone 12 Pro / 12 Pro Max / 12 / 12 mini
- iPhone 11 Pro / 11 Pro Max / 11
- iPhone XS / XS Max / XR / X
- iPhone 8 / 8 Plus
- iPhone 7 / 7 Plus
- iPhone 6s / 6s Plus
- iPhone 6 / 6 Plus
- iPhone SE (1st generation) / SE (2nd generation)
- iPhone 5s / 5c / 5




NOTE

- App providers are responsible for the content and functionality of Apple CarPlay.
- App providers determines the limitation of using Apple CarPlay while driving.

Starting procedure

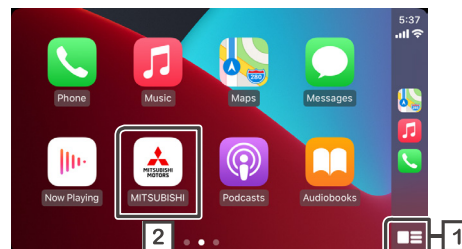- 1 Touch [Apple CarPlay].
- 2 Apple CarPlay screen appears.



- 1  Display the Apple CarPlay menu with a single touch of the key.
Touching and holding the key will launch the voice recognition function. Voice recognition function can also be launched by touching .
- 2 Touch  Display the HOME screen.

NOTE

- Mitsubishi Motors is not responsible for data lost from an iPhone while using this function. Please back up your iPhone data regularly.
- Do not expose iPhone to the direct sunlight for extended amount of time. It may result in iPhone malfunction due to the high temperature.

Setting the driver position

In order to achieve optimum usability of Apple CarPlay, set the driver position setting correctly according to the vehicle.

1 Press  button and Popup menu appears.

2 Touch [System].



3 Touch [User Interface].

4 Touch [Driving Position].

5 Touch the item you would like to set.*

- Left: Select for a left-hand drive vehicle.
- Right (Default): Select for a right-hand drive vehicle.

*The setting will be applied the next time an Apple CarPlay compatible device is connected to the unit.

Android Auto

Setup for Android Auto

Android Auto can only be operated on compatible Android mobile phone which is connected to the unit via certified USB cable. Android Auto may not be available on some countries or regions. For details about Android Auto, visit the official website: <https://support.google.com/androidauto>

 
Android Auto compatibility

Android Auto is available on Android 6.0 and later version. If your mobile phone is below Android 9.0, please download the "Android Auto" App from Google Play. If your mobile phone is Android 10.0 or later, you do not need to download the "Android Auto" app.



Starting procedure


- 1 Connect and pair the mobile device with the unit by Bluetooth.
- 2 Connect the Android Auto compatible mobile device to the unit via USB cable.
- 3 Touch [Android Auto].

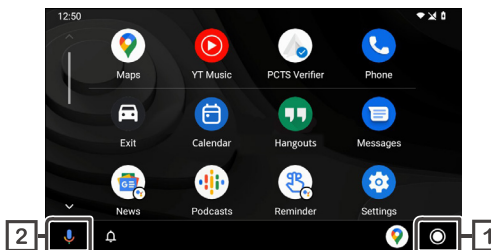4 Android Auto screen appears.



If the function is set up, Android Auto will launch automatically when the compatible mobile device is connected to this unit.

- 1  Display the Android Auto menu screen with a single touch of the key.
- 2  Touch the key can launch the voice recognition function.

Voice recognition function can also be launched by touching .

NOTE

- Mitsubishi Motors is not responsible for data lost from a mobile device while using this function. Please back up your mobile device data regularly.
- Do not expose mobile device to the direct sunlight for extended amount of time. It may result in mobile device malfunction due to the high temperature.

Setting the driver position

In order to achieve optimum usability of Android Auto, set the driver position setting correctly according to the vehicle.

1 Press  button and Popup menu appears.

2 Touch [System].



3 Touch [User Interface].

4 Touch [Driving Position].

5 Touch the item you would like to set.*

- Left: Select for a left-hand drive vehicle.
- Right (Default): Select for a right-hand drive vehicle.

*The setting will be applied the next time an Android Auto compatible device is connected to the unit.

Radio

Starting procedure

- 1 Press  button.
- 2 Touch .
- 3 Touch [Radio].

Basic operation

 
FM or AM radio can be received and played.




RDS/RBDS

The RDS/RBDS enables FM radio stations to send additional information along with the regular program signal. The radio and tuners with RDS/RBDS function is able to receive and display RDS/RBDS information, like station name, current program service name or program type.

NOTE

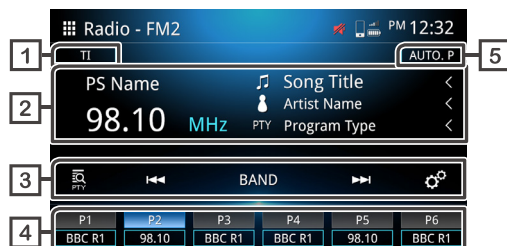- Not all FM radio stations provide RDS/RBDS service, nor do they provide the same type of service.



- 1 **TI *₁**
Traffic information (On / Off).
- 2 **Information display *₁**
Display the current station information.
- 3 **Operation keys**
 -  PTY Search (see **P. 44**). *₁
 -  Switches to the previous/next frequency manually. Touch and hold to tune to a station with good reception automatically. In the HOME screen, the registered preset station can be selected.
 - **BAND** Switch the band (FM1 / FM2 / AM).
 -  Radio Setting.
 - AF Search: When station reception is poor, automatically switches to the station that is broadcasting the same program over the same Radio Data System network. "ON", "ON (regional)", "OFF".
 - Auto TP Seek: When the screen is not in the radio mode, the unit automatically seek station which supported traffic information. "ON", "OFF".
- 4 **Preset station**
Recalls the memorized station. When touched for 2 seconds, stores the current receiving station in memory.
- 5 **Auto preset**
Preset stations automatically.

*₁ RDS/RBDS-compatible model only

 
Non-RDS/RBDS

Some countries does not support RDS/RBDS. The unit will display frequency information only.



Auto preset procedure

- 1 Touch [AUTO.P].
- 2 Confirm the message and touch [Yes].

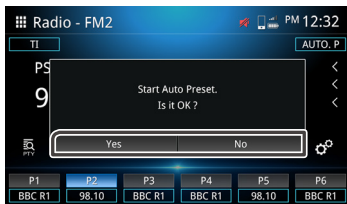

Manual preset procedure

- 1 Select the channel frequency you would like to preset in a key.
- 2 Touch a key (P)1-6 for 2 seconds.

PTY Search (RDS/RBDS-compatible model only)

You can tune into a station by using PTY (Programme Type).

- 1 Touch .
- 2 Select one from follows items.

 
RDS genre

- News / Current Affairs / Information / Sports / Education / Drama / Culture / Science / Varied / Pop Music / Rock Music / Easy Listening Music / Light Classical / Serious Classical / Other Music / Weather / Finance / Children's Programmes / Social Affairs / Religion / Phone In / Travel / Leisure / Jazz Music / Country Music / National Music / Oldies Music / Folk Music / Documentary / All Speech / All Music

RBDS genre

- News / Information / Sports / Talk / Rock / Classic Rock / Adult Hits / Soft Rock / Top 40 / Country / Oldies / Soft / Nostalgia / Jazz / Classical / Rhythm and Blues / Soft R&B / Foreign Language / Religious Music / Religious Talk / Personality / Public / College / Hablar Espanol / Musica Espanol / Hip-Hop / Weather / All Speech / All Music

- 3 Touch Search

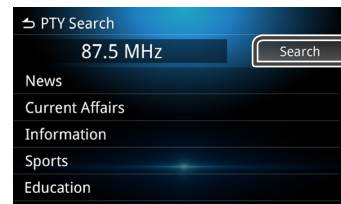

NOTE

- This function is available only when the FM tuner is selected.

 
Digital Radio (Only for DAB compatible model)




Starting procedure




- 1 Press  button.
- 2 Touch .
- 3 Touch [DAB].

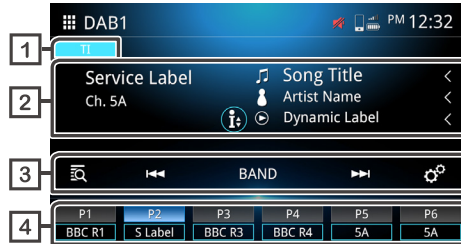Basic operation





DAB can be received and played.



- 1 **TI**
Traffic information (On / Off).
- 2 **Information display**
Display the current station information.
 -  Song title.
 -  Artist Name.
 -  Dynamic Label.

-  Ensemble Label.
-  PTY.
-  Audio Quality.

3 Operation keys

-  Station List.
-  Manual tuning.
Touch and hold to tune to a station with good reception automatically.
-  BAND Switch the band (DAB1 / DAB2 / DAB3).
-  Radio Setting.

-Announcement Select: You can select type of announcement. After the type of announcement is selected, the original selected station is restored automatically.

-Service Following: DAB following (hard link). "ON", "OFF".

-Service Related : DAB following (soft link). "ON", "OFF".

4 Preset station

Recalls the memorized station.
When touched for 2 seconds, stores the current receiving station in memory.

Dashboard Camera

You can display the video image from the connected dashboard camera.

NOTE

- For safety, video image cannot be viewed while you are driving. If you would like to view the video image, stop the car in a safe place and apply the parking brake.
- Only genuine dashboard camera can be displayed.

Starting procedure


 



- 1 Press  button.
- 2 Touch .
- 3 Touch [Dash Cam].







Basic operation





 







1 Operation keys

-  Hide all the information on the screen.
-  Menu.
-  Take a still picture.
-  Voice recording (On / Off).
-  Start manual recording.

2 Track information display

-  Continuous recording.
-  Event recording.
-  Stop recording
-  The remaining time counter for manual or event recording (seconds).

-  Save error status.
-  Event recording save error.
-  Manual recording save error.
-  Parking recording save error.
-  Shoot still picture.
-  Voice recording on.
-  Resolution: UXP
UXP :Ultra high quality
-  Resolution: XP
XP :High quality
-  Resolution: SP
SP :Standard quality
-  Resolution: LP
LP :Long Play quality

Menu Operation



Play File

Management for recorded files.

Parking Recording Setting

The setting for parking recording.

Recording Setting

The settings for recording.

Dashboard Camera Setting

The settings of dashboard camera.

Initialize the SD card

The settings of SD card initialization.

File management

1 Touch  .

2 Touch [Play File].

 
3 Touch the folder you would like to select.



4 Touch  .




- 5 Select the item you would like to select.

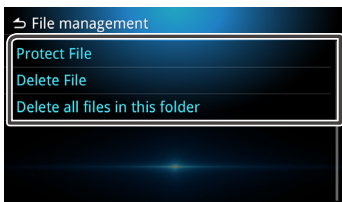

Protect File

 
- 1 Select the file to be protected.

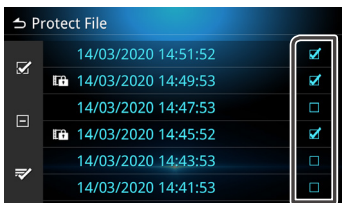

- Select all files.
- Clear all selected checks.
- Confirm the selected files to be protected.


*The protect file is unavailable when the recording is proceeding.

 - 2 Touch and the confirmation message appears.

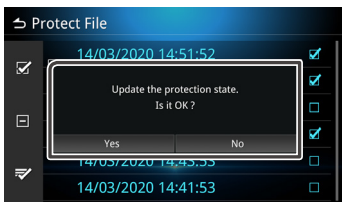


Delete File

 - 1 Select the file you want to delete.

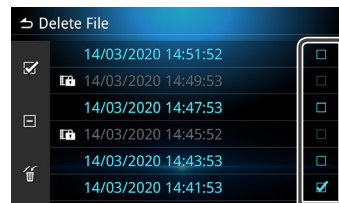

*The protected file cannot be deleted.

 - 2 Touch and the confirmation message appears.

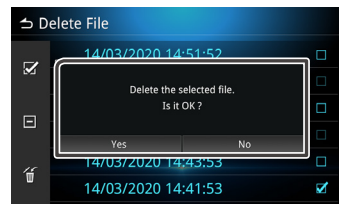

Playback

To playback the recording files.

- 1 Touch .
- 2 Touch [Play File].
- 3 Touch the folder you would like to select.



4 Select a file you want to playback.



5 Select operation function.



1 Recording file play status.

2 Playback operation.

- Hide all the following options.
- Pause playback file and call the protection confirmation dialog.
- Zoom operation menu.
- Delete the file.

Zoom operation

1 Touch and select zoom x1, x2 or x4.



2 Flick the point you want to zoom in. The unit will automatically move the point to the centre of the screen.

Other External Components

Using the back camera

Driving Precautions

The back camera plays a subsidiary device in order to help driver check the rear image of the vehicle. Please be sure that before driving to make a visual check on the vehicle's surroundings with a mirror before operating the vehicle.

Please pay attention to the following notices and instructions when using the back camera.

CAUTION

 
- Drivers shall not depend on the back camera only. There have some difference tolerance from the image and the actual object.
- When using back camera monitor, you should not only focus on the screen, but also use vehicle mirrors and eyes to check actual conditions.
- The position of guide line displayed on the monitor may differ from actual condition. Please take the actual guide line as reference and check with eyes.
- When the tire size changed, the guide line position displayed on the screen may also differ.

NOTICE

- Do not use high-pressurized water column to wash back camera to avoid damage.
- The distances between the vehicle and objects may differ from the actual distance.
- There are blind spots of the vehicle so will not be displayed in back camera monitor.


Display the camera image screen

When you shift the gear to the reverse (R) position, the camera screen is displayed.

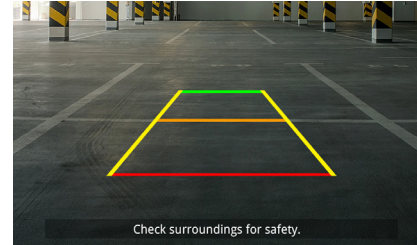

You can select to turn off guideline and caution message display. (see P. 52)

Display the camera image manually

Short press  button to enter back camera image screen. (see P. 7)





Settings

You can adjust various Settings in the main menu.

Display the Settings menu

1 Press  button and popup menu appears.

2 Touch one of the following items.

-  **Display Adjust Settings.**
-  **System Settings.**
-  **Connectivity Settings.**
-  **Audio Settings.**

 
NOTE

- For safety, the Settings cannot be set while the car is moving. If you would like to adjust Settings, stop the car in a safe place and apply the parking brake.

 
Display Adjust


1 Press  button and popup menu appears.


2 Touch [Display Adjust].





3 Display control screen appears.




 Adjust Contrast. "-4, -3, -2, -1, 0, 1, 2, 3, 4"

 Adjust Brightness. "-4, -3, -2, -1, 0, 1, 2, 3, 4"

 Adjust Color. "-4, -3, -2, -1, 0, 1, 2, 3, 4"

 Adjust Backlight. "-4, -3, -2, -1, 0, 1, 2, 3, 4"

 **(Video file only)**
Aspect. "Full, Normal, Auto"

 **Close the adjustment Settings.**

 
System Settings

1 Press  button and popup menu appears.

2 Touch [System].



3 Select one of the Settings as follows.

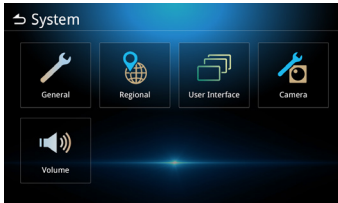

- General Settings.
- Regional Settings. (see **P. 8 - P. 9**)
- User Interface Settings.
- Camera Settings.
- Volume Settings.

General Settings

Software Information

Display the software information of the unit.

Open Source Licenses

Display the open source licenses information.

Restoring Factory Default

Restore factory default and touch Yes to initial default settings.

User Interface Settings

Beep

Beep sound turns ON (Default)/OFF.

Background

Change background image.

Key Illumination Brightness

Change key brightness.

Gesture Control Instruction

The information of gesture control.

Driving Position

Select the driving position is right or left.

Widget Setup

Setup the widget.

The position of the clock on the Home screen will change from right to left or left to right.

Camera Settings

Guidelines

Adjust to turn on or off guidelines in Camera screen.

Caution Message

Adjust to turn on or off caution message in Camera screen.

Volume Settings

AV Source Volume

Adjust audio source volume. "0-40" (Default: 20)

Reception Volume

Adjust calling volume. "0-40" (Default: 23)

Incoming Ring Tone Volume

Adjust incoming ring tone volume. "0-40" (Default: 23)

Voice Guidance Volume

 
Adjust Apple CarPlay guidance and Android Auto voice recognition volume. (Default: 23)

Siri Volume


Adjust Apple CarPlay Siri volume. (Default: 23)

Audio Settings

- 1 Press  button and Popup menu appears.
- 2 Touch [Audio].



 
- 3 Select one of the settings as follows.

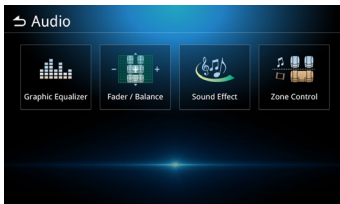

- **Graphic Equalizer.**
- **Fader / Balance.**
- **Sound Effect.**
- **Zone Control.**

Graphic Equalizer Settings

 - 1 Touch [Graphic Equalizer].

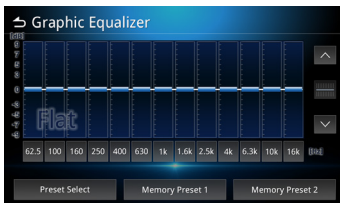

- 2 Touch one of the following items.



■ Preset Select

Touch **Preset Select**.

Select one of the items from follows.

Flat / Pop / R&B / Jazz / Classical / Hard Rock / User 1 / User 2

■ Customized

Touch the frequency of each bar to adjust the gain level. (-9~9). You also can touch ,  to adjust gain level.





After adjust the frequency, touch **Memory Preset 1 /**

 
Memory Preset 2 to store as preset memory.

Memory Preset 1 and **Memory Preset 2** will be set to **User 1** and **User 2** in Preset Select.

Fader/ Balance Settings

Fader and Balance adjust the strength of the sound coming from each speaker. The Balance adjusts side-to-side (L-R) strength and the Fader adjusts the front-to-back strength.

- Touch ,  to adjust the front and rear speaker balance.
 - Touch ,  to adjust the left / right speaker balance.
- You also can touch and drag the control point to the appropriate place.

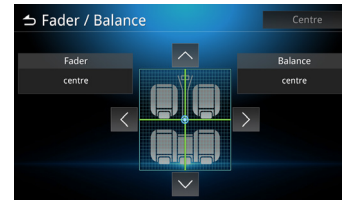

Sound Effect Settings

1 Touch [Sound Effect].



2 Adjust each selection as follows.

■ Bass Boost

Adjust the bass boost level. OFF, 1, 2, 3.

■ Auto Sound Level

The unit automatically adjusts EQ setting based on volume level or vehicle speed. OFF, ON.

■ K2 Technology

K2 is an information processing technology which enhances the sound quality. OFF, ON.

Zone Control Settings



You can select different sources for front and rear positions in the vehicle.

■ Zone Select

Touch Single Zone to turn off Dual Zone function.

■ Front Source / Rear Source

You can select a source for each.

Front Source : AV Off / Radio (DAB) / USB / Bluetooth Audio / iPod / Apple CarPlay / Android Auto / MM-Link

Rear Source : Radio (DAB) / USB / OFF

| Front Source | Rear Source |
|-------------------------------------|-------------------------|
| AV Off | Radio (DAB) / USB / OFF |
| Radio (DAB) | USB / OFF |
| USB (Audio / Video) | Radio (DAB) / OFF |
| iPod / Apple CarPlay / Android Auto | Radio (DAB) / USB / OFF |
| Bluetooth Audio | Radio (DAB) / USB / OFF |
| MM-Link | Radio (DAB) / USB |

■ Rear Volume

 
When the Zone Select is set as Dual Zone, the rear volume can be adjust separated from the front volume.






NOTE

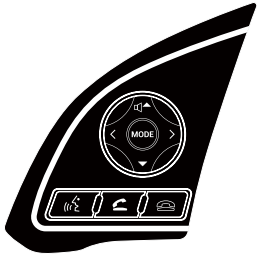


- When you set Rear Source Off, the rear volume cannot be adjusted.
- When Single Zone is selected, others options will be disabled.
- The Front and rear source cannot be the same.
- When dual zone is selected, the Equalizer Control, Sound Effect, Fader and Balance will not be available.

Steering Control Switch

This unit can be operated by using the buttons on the steering wheel.



| Key Name | Short Press | Long Press (Hold) |
|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|
|  | Switch sources AV OFF > Apple CarPlay / Android Auto / MM-Link > DAB1 > DAB2 > DAB3 > FM1 > FM2 > AM > Bluetooth Audio > iPod > USB > AV OFF *No transition to DAB in the non DAB model. | Turns Mute On. (Mute off by Volume Up / Down) |
|  | Adjusts the volume up. | Volume up continuously. The volume will go up to 25. After that, you can go up to 40 with short press. |
|  | Radio: Select previous preset channel. Apple CarPlay / Android Auto, USB, iPod, Bluetooth Audio: Select Previous track. | Radio: Auto reverse Seek. USB, iPod, Bluetooth Audio: Fast Backward. |
|  | Radio: Select next preset channel. Apple CarPlay / Android Auto, USB, iPod, Bluetooth Audio: Select Next track. | Radio: Auto forward Seek. USB, iPod, Bluetooth Audio: Fast Forward. |
|  | Adjusts the volume down. | Volume down continually. |

| Key Name | Short Press | Long Press (Hold) |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>Behavior depends on the smartphone model.</p> <p>Apple CarPlay: When no Siri activate: Start the Voice Recognition. When Siri is activating: Depends on iPhone.</p> <p>-----</p> <p>Android Auto: When no VR activate: Start the Voice recognition. When VR is activating: Cancel Voice recognition.</p> <p>*No action when Apple Car Play / Android Auto is not connecting.</p> | <p>Behavior depends on the smartphone model.</p> <p>Apple CarPlay: When no Siri activate: No action. When Siri is activating: Depends on iPhone.</p> <p>-----</p> <p>Android Auto: When no VR activate: No action. When VR is activating: Depends on Android Phone. Ex):Restart Voice recognition.</p> <p>*No action when Apple Car Play / Android Auto is not connecting.</p> |
|  | <p>[When Not Talking]: Transition to Hands Free Screen. [When Talking]: N/A [Incoming call]: Receive an incoming call. [Dialing]: N/A</p> | |
|  | <p>[When Not Talking]: No action. [Talking]: End call. [Incoming call]: Refuse incoming call. [Dialing]: End Call.</p> | |

Appendix

| File Format / Video File Format | Video Codec | Audio Codec | Max Resolution | FPS | BPS (Mbps) | Note |
|---------------------------------|-----------------------------------------------------------------------------------|-------------------------------------|--------------------|-----|------------|-----------------------|
| MPEG1 | MPEG-1 Video | MP1 / MP2 / MP3 AAC-LC DTS LPCM | 352x240 352x288 | 30 | 1.5 | |
| MPEG2 | MPEG-2 Video | MP1 / MP2 / MP3 AAC-LC DTS LPCM | 720x480 720x576 | 30 | 8 | |
| MP4 | MPEG-2 Video MPEG-4 SP / ASP H.264 Xvid MJPEG | MP3 AAC-LC / HE-AAC LPCM | 1920 x 1080 | 30 | 8 | |
| AVI | MPEG-4 SP / ASP H.264 DivX Xvid WMV 9 / VC-1 MJPEG | MP3 WMA Std / Prof LPCM / ADPCM DTS | 1920 x 1080 | 30 | 8 | f4v is not support |
| MOV | MPEG-4 SP / ASP H.264 MJPEG | MP3 AAC-LC / HE-AAC LPCM | 1920 x 1080 | 30 | 8 | |
| MKV | MPEG-2 Video MPEG-4 SP / ASP H.264 Xvid DivX DivX Plus HD RV30 / RV40 WMV9 / VC-1 | MP3 DTS LPCM AAC-LC / HE-AAC Cook | 1920 x 1080 | 30 | 8 | vorbis is not support |
| FLV | Sorenson H.263 H.264 | MP3 AAC-LC / HE-AAC LPCM / ADPCM | 1920 x 1080 | 30 | 8 | |
| WMV | WMV9 / VC-1 | WMA Std / Prof | 1920 x 1080 | 30 | 8 | |

| Audio File Format | Audio Codec | Sample Rate (kHz) | BPS (kbps) | Bit | Note |
|-------------------|-----------------|-------------------|------------|----------------|--------------------------------------------------------------|
| MP3 | MPEG PS | 16 - 48 | 8 - 320 | 16-bit | |
| AAC | AAC-LC / HE-AAC | 16 - 48 | 8 - 320 | 16-bit | adts / loas / latm |
| | | 16 - 48 | 8 - 320 | 16-bit | adif / raw: no tricky play |
| WMA | | 16 - 48 | 8 - 320 | 16-bit | Not Support: 1. WMA v1 2. WMA lossless 3. WMA voice |
| WAV | LPCM IMA-ADPCM | 16 - 192 | | 16-bit, 24-bit | |
| FLAC | FLAC | 16 - 192 | | 16-bit, 24-bit | |

Note for specifications

Bluetooth section

Frequency

- 2.402 – 2.480 GHz

RF Output Power (E.I.R.P.)

- +6 dBm (MAX), Power Class 1

General

Operating Voltage

- 12 V DC car battery

Speaker Impedance

- 4 Ω

Trademarks and licenses



android
auto



- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by JVCKENWOOD Corporation is under license. Other trademarks and trade names are those of their respective owners.
- Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with an Apple product may affect wireless performance.
- Apple, iPod, iPhone, and Lightning are trademarks of Apple Inc., registered in the U.S. and other countries.
- Apple CarPlay, Siri and Apple CarPlay logo are trademarks of Apple Inc., registered in the U.S. and other countries.
- App Store is a service mark of Apple Inc., registered in the U.S. and other countries.

- Google, Android, Google Play and Android Auto are trademarks of Google LLC.
To use Android Auto on your car display, you'll need an Android Auto compatible vehicle or aftermarket stereo, an Android phone running Android 6.0 or higher, and the Android Auto app.

JAMAICA

This product has been Type Approved by Jamaica: SMA –'DMXMG901'

INDONESIA

Service Center

Jika masalah masih timbul, silakan menghubungi pusat service kami:

PT. Jaya Victori Cemerlang

Jl. Cideng Timur No.6D

Jakarta 10130

Indonesia.

Telp : (62)(021) 6386 7836

Fax : (62)(021) 6386 7837

Dibuat oleh:

PT JVCKENWOOD ELECTRONICS INDONESIA

Jl. Surya Lestari Kav. 1-16B

Suryacipta City of Industry,

Kel. Kutamekar, Kec. Ciampel

Kab. Karawang 41363,

Prop. Jawa Barat

Manufacturer Model Name

Nama Model Produsen

DMXMG900 / DMXMG901 / DMXMG911

JKEI Certification of Registration

NOMOR : PMKG.202.04.2022

THAILAND

RADIO REGULATION (NBTC)



nbtc.

เครื่องวิทยุคมนาคมนี้ ได้รับยกเว้น ไม่ต้องได้รับใบอนุญาตให้มี ใช้ซึ่งเครื่องวิทยุคมนาคมหรือตั้งสถานีวิทยุคมนาคมตามประกาศ กสทช. เรื่อง เครื่องวิทยุคมนาคม และสถานีวิทยุคมนาคมที่ได้รับยกเว้นไม่ต้องได้รับใบอนุญาตวิทยุคมนาคมตามพระราชบัญญัติวิทยุคมนาคม พ.ศ. 2498



nbtc. โทรคมนาคม

กำกับดูแลเพื่อประชาชน

Call Center 1200 (InswS)

Declaration



Declaration of Conformity with regard to the RE Directive 2014/53/EU.

Declaration of Conformity with regard to the RoHS Directive 2011/65/EU.

Manufacturer:

JVCKENWOOD Corporation

3-12, Moriya-cho, Kanagawa-ku, Yokohama-shi, Kanagawa, 221-0022, Japan

EU Representative:

JVCKENWOOD Europe B.V.

Amsterdamseweg 37, 1422 AC UITHOORN, THE NETHERLANDS

Hereby, JVCKENWOOD declares that the radio equipment "DMXMG901" "DMXMG911" is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: <https://www.kenwood.com/euukdoc/>

Important Notice on Software

Software License on This Product

The software embedded in this product comprises a number of independent software components, each of which is copyrighted by JVCKENWOOD Corporation or by a third party.

This product uses software components that are based on an End-User License Agreement (hereinafter called "EULA") stipulated by JVCKENWOOD Corporation and by third parties.

The EULA dictates the availability of the source codes of free-software components as a prerequisite to distributing them in executable form under the terms of the GNU General Public License or the Lesser General Public License (hereinafter called "GPL/LGPL"). To get information about the software components that are subject to the terms of the GPL/LGPL, please visit the following Website:

Website URL <https://www2.jvckenwood.com/gpl/>

Queries concerning the contents of the source code or the like will not be accepted.

Please note that software components based on a EULA that is not subject to the terms of the GPL/LGPL or those that have been developed or created by JVCKENWOOD Corporation will be excluded from the scope of source code disclosure.

Because licenses to use software components distributed under the GPL/LGPL are oered to the customers for free of charge, no warranty is granted to the customers, whether explicitly or implicitly, to the extent of the applicable laws.

Unless otherwise stipulated by the applicable laws or agreed upon in writing, the copyright holders or those who are entitled to modify and redistribute the software components are not held responsible for any and all damages resulting from their use or from inability to use them.

For more information about the terms of use of the software components, required items of compliance and so on, please refer to the GPL/LGPL.

Customers wishing themselves to use a software component that is subject to the GPL/LGPL embedded in this product are encouraged to read the terms of the corresponding license before use.

Because each individual license is prescribed by a third party other than JVCKENWOOD Corporation, the original (English) of the license is presented.

EULA

Software License Agreement

JVKENWOOD Corporation (hereinafter called "Licensor") holds either the copyright to the embedded software or the right to sublicense it. This agreement establishes the conditions under which the customer uses this "Licensed Software."

The customer shall agree to the terms of this license agreement before proceeding to use Licensed Software.

This agreement is deemed to have taken effect when the customer (hereinafter called "User") has used a product implementation of Licensed Software.

The Licensed Software may contain software Licensor has been licensed to use by third parties directly or indirectly. Some third parties may have terms of use prescribed for their customers, apart from this Software License Agreement.

This agreement does not apply to such software. Be sure to consult "Important Notice on Software" as presented separately.

Article 1 (General)

Licensor grants to User a non-exclusive, non-assignable right of use Licensed Software within the country where the User purchases the Product (hereinafter the "Country") (except for the exception provided for in Paragraph 1, Article 3).

Article 2 (Right of Use)

1. The right of use granted under this agreement is the right to use Licensed Software in this product.
2. User may not duplicate, copy, modify, add to, translate or otherwise alter, or loan licensed Software and the associated literature in whole or in part.
3. Use of Licensed Software is limited to a private extent, and Licensed Software may not be distributed, licensed or sublicensed for any purposes whatsoever, including commercial use.

4. User shall use Licensed Software as per the instruction manual or instructions given in the help file and may not use or duplicate data in violation of the regulations of the Copyright Law or other governing laws by using Licensed Software in whole or in part.

Article 3 (Terms of License)

1. In assigning this product, User may not retain the original copy of the embedded Licensed Software (including associated literature, updates and upgrades) and any duplicates and associated literature with regard to the license to use Licensed Software. User may transfer Licensed Software only to the condition of binding the assignee to abide by the terms of this Software License Agreement.
2. User may not reverse-engineer, disassemble, decompile or otherwise analyze the source code of Licensed Software.

Article 4 (Rights to Licensed Software)

All rights to Licensed Software and the associated literature, including copyrights, shall reside with Licensor or the original right holder who has granted the Right of Use and right to sublicense to Licensor (hereinafter referred to as "Original Right Holder"), and User does not have any rights other than Right of Use granted hereunder with regard to Licensed Software and the associated literature.

Article 5 (Exemption Granted to Licensor)

1. Licensor and Original Right Holder do not assume any responsibility for damages caused to User or third parties resulting from the exercise by User of the license granted hereunder, unless otherwise provided by any law to the contrary.
2. Licensor does not warrant Licensed Software to be merchantable, compatible and fit for specific purposes.

Article 6 (Responsibility for Third Parties)

If disputes over the infringement of third parties' intellectual property rights, such as copyrights and patent rights, arise out of the use of Licensed Software by User, User shall resolve these disputes at User's own expenses while keep Licensor and Original Right Holder harmless.

Article 7 (Secrecy Obligation)

User shall keep confidential Licensed Software provided hereunder, information contained in the associated literature or the like and those provisions of this agreement not yet in public knowledge and may not disclose or leak these to third parties without prior written consent from Licensor.

Article 8 (Cancellation of the Agreement)

Licensor reserves the right to cancel this agreement forthwith and claim compensation from User for the damages caused by such cancellation when User:

- (1) Breaches any of the provisions of this agreement, or
- (2) Has received a petition for seizure, provisional seizure, provisional disposition or any other kind of compulsory execution.

Article 9 (Destruction of Licensed Software)

If this agreement is terminated under the provision of the foregoing paragraph, User shall destroy Licensed Software, along with all associated literature and its duplicates, within two (2) weeks from the date of termination.

Article 10 (Copyright Protection)

1. Copyrights and all other intellectual property rights relating to Licensed Software shall reside with Licensor and Original Right Holder and in no circumstances with User.
2. User shall abide by the laws relating to copyrights and intellectual property rights in using Licensed Software.

Article 11 (Export Control)

1. Licensed Software and the associated literature or the like may not be exported to places outside the Country (including transmission outside the Country over the Internet or the like).
2. User agrees that Licensed Software is subject to export controls imposed by the Country and the United States of America.
3. User agrees to comply with all the international and domestic laws that apply to this software (U.S. Export Administration Regulations and regulations established by the U.S., the Country and their governmental agencies regarding usage by end users and export destinations).

Article 12 (Miscellaneous)

1. Even if this agreement is invalidated in part by law, all other provisions shall remain in effect.
2. Licensor and User shall consult each other in good faith to resolve any matters not provided for in this agreement or questions arising from the interpretation of this agreement.
3. Licensor and User agree that this agreement is governed by the law of Japan and that all disputes involving claims and obligations that may arise out of this agreement will be settled by arbitration at the Tokyo District Court as the court of first instance.

Troubleshooting


Check items in the following table first when you encounter problems. The most common problems are listed below. If the problem is not solved even after checking the applicable item, contact your dealer.

In case that a defect (such as blown fuse) occurs, be sure to contact your dealer for the repair service. If you try to change or fix the fuse, you may cause more damage.

| Condition | Checking Items |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>When the display exhibits one of the following conditions:</p> <ul style="list-style-type: none"> > Totally dark and the light does not come on. > The light is on but nothing is displayed. > The unit does not go into Night mode even the lights are on. | <p>Is the displayed powered "off"?</p> <ul style="list-style-type: none"> > Press the button, etc. <p>Is the setting for the image quality correct?</p> <ul style="list-style-type: none"> > Verify the Display Adjustment settings. <p>If this does not solve the problem, turn the unit off and then on again.</p> <p>If the problem continues, contact your dealer.</p> |
| <p>When the monitor has small spots or bright points.</p> | <p>This is not a failure of the unit.</p> <ul style="list-style-type: none"> > This is a specific phenomenon to liquid crystal displays. LCDs are built with highly accurate technologies and have 99.99% or higher effective pixels. However, sometimes pixels may fail at a rate of 0.01% or less, or some pixels may get "stuck" on a steady color. |
| <p>When the image is not clear.</p> | <p>Are the display brightness adjusted correctly?</p> <ul style="list-style-type: none"> > Refer to adjust the brightness of the display.(see P. 51) |
| <p>When the sound is coming out of only one of the speakers.</p> | <p>Is the sound volume adjusted properly?</p> <ul style="list-style-type: none"> > Adjust the volume on the Front/Rear and Right/Left speaker. (see P. 53) |

| Condition | Checking Items |
|---------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No power to the unit. | Fuse blown out. > Consult your dealer. |
| Sound is not generated. | Is it in the pause or the mute-ON state? > Disable the pause state or set to the mute-OFF state. |
| Sound skipping or noise occurs. | There is an electromagnetic-wave generator such as a cellular phone near the unit or its electrical lines. > Keep the electromagnetic-wave generator such as a cellular phone away from the unit and the wiring of the unit. If noise cannot be eliminated due to the wiring harness of the car, consult your dealer. Playing VBR(Variable Bit Rate) files may cause sound skipping. > Play Non-VBR files. |
| Some operations are not executable. | Some operations are not executable in particular modes. > Read the operating instructions carefully and cancel the mode. If the unit is still out of order, consult your dealer. |
| Bluetooth device cannot be connected to the unit. | Is the Bluetooth device able to be used with the unit? > Be sure to carefully read user's manual of the Bluetooth device to check that there are no potential problems. If the Bluetooth device is portable audio equipment, successful connection may be achieved by changing the connection method. |

| Condition | Checking Items |
|--------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>USB cannot be detected. iPod is not being correctly operated.</p> | <p>USB devices are recommended to use the memory capacity under 32 GB ; the memory devices with over 32GB capacity might not be able to be read; > USB support format FAT16 and FAT32. If happened USB cannot read, it might be the wrong format to cause this issue; please format your device again and chose the right format. Remove iPod from the unit and reconnect the iPod after resetting the iPod. For the iPod resetting method, refer to the iPod user's manual.</p> |
| <p>Rear camera difficult to see the image.</p> | <p>The vehicle may be in a dark area. Please put your car away from the uneven light or from direct sunlight. There are water droplets or external factor (mud etc.)on the camera. Please clean softly the camera with water and soft cloth.</p> |
| <p>The image of rear camera is blurry.</p> | <p>The dirt or external factors (like water droplets, snow, and mud etc.) attached to the camera. Please clean softly the camera with water and soft cloth.</p> |
| <p>The image of rear camera is out of alignment.</p> | <p>Please have your dealer to check the vehicle.</p> |
| <p>The guide lines are out of alignment.</p> | <p>The camera position may out of alignment. Please have your dealer to check the vehicle.</p> |

| Condition | Checking Items |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| MM-Link does not sound. | <ul style="list-style-type: none"> > Verify that the MM-Link installed device is selected in Bluetooth connection setup. > Raise the volume on your smartphone. > Try another music application. Some application does not support MM-Link playback. (Apple Music App does not support to playback during MM-Link.) |
| Cannot operate MM-Link with touch panel operation. | <ul style="list-style-type: none"> > Available operation functions may differ from the ones operated on the device. Some functions do not work by operation on this unit depending on the connected device. |
| <p>When connecting to your iPhone and the screen appears the following screen.</p>  | <p>Please turn off the iPhone's microphone and restart the broadcast, then reconnect the USB.</p> |

